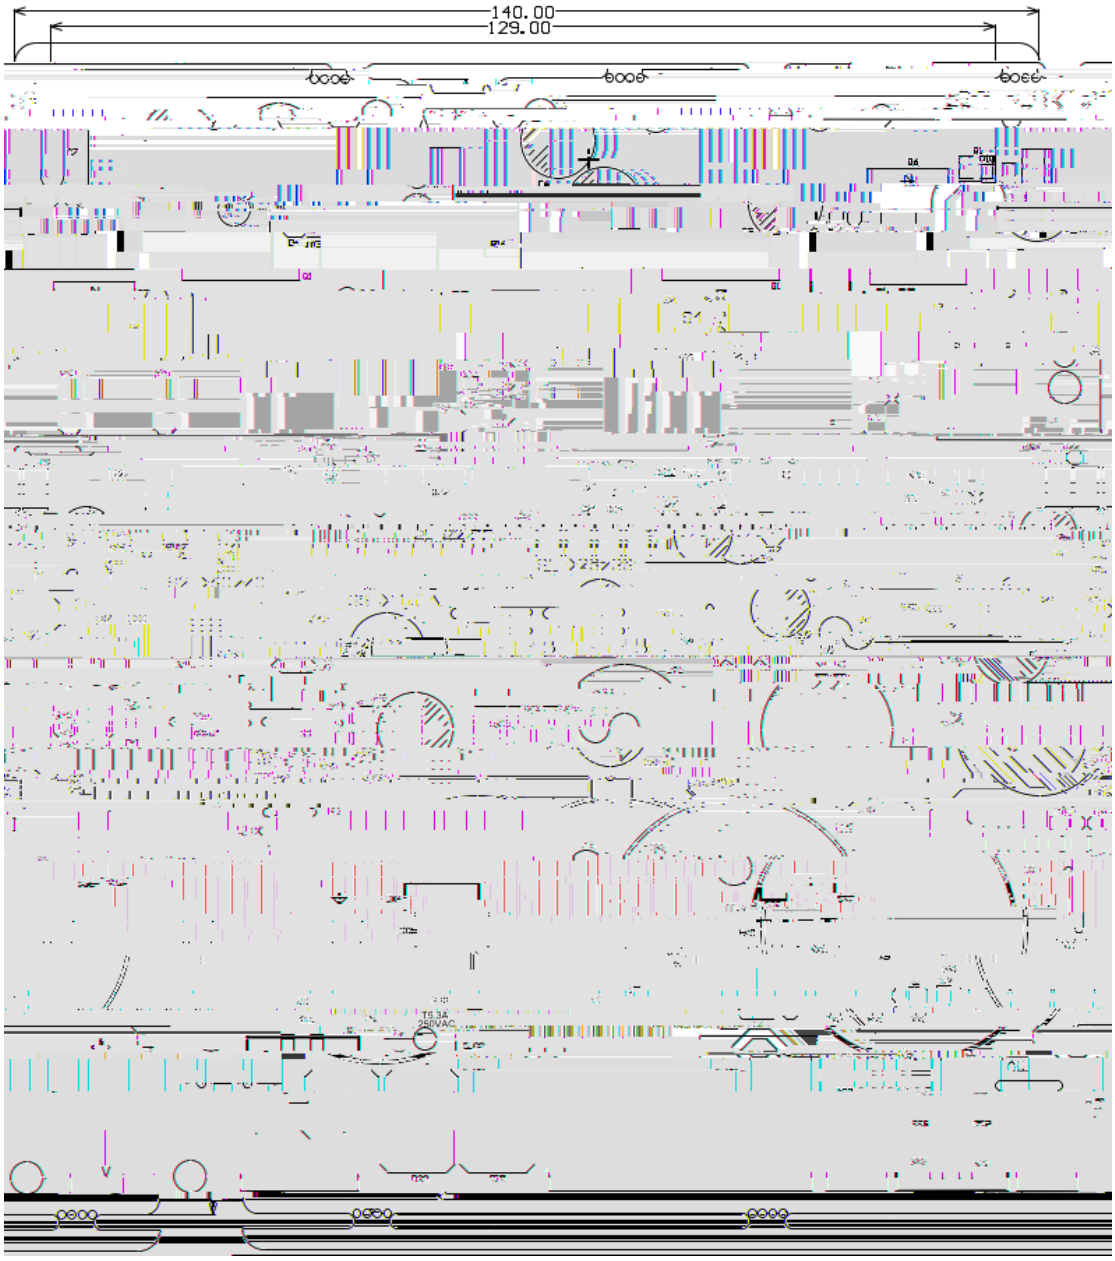
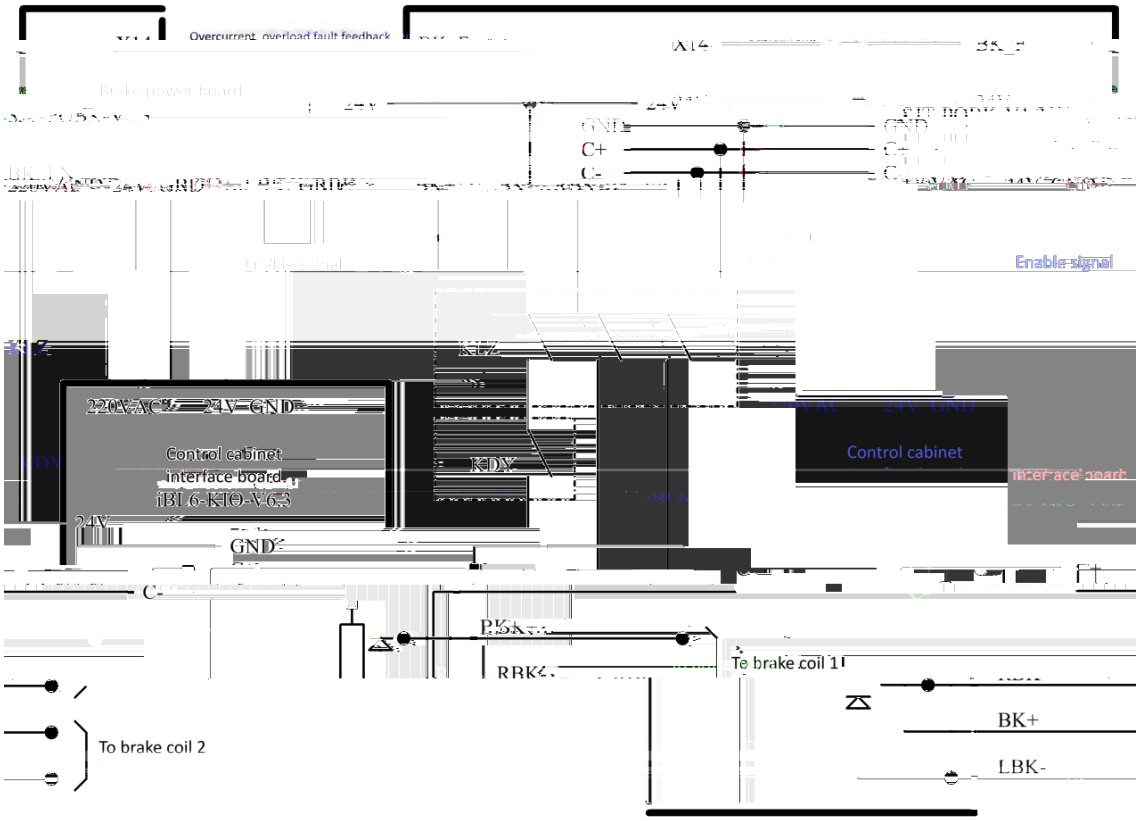
J1		J1-PE	PE
		Null	
		J1-AC	220VAC Mains supply input terminal
		J1-AC	
J2		J2-BK+	Positive output of brake power supply
		J2-LBK-	Negative output of the second brake power supply
		J2-RBK-	Negative output of the first brake power supply
J3		J3-24V	24V power supply output. Maximum output current is 5A.
		J3-GND	

1. Dual-


140.00
129.00
T6.3A
250VAC


Overcurrent, overload fault feedback
Brake power board
GND
C+
C-
Enable signal
220VAC
24V
GND
Control cabinet
interface board
iBL6-KIO-V6.3
KDY
Control cabinet
interface board
To brake coil 2
To brake coil 1
BK+
LBK-