✧

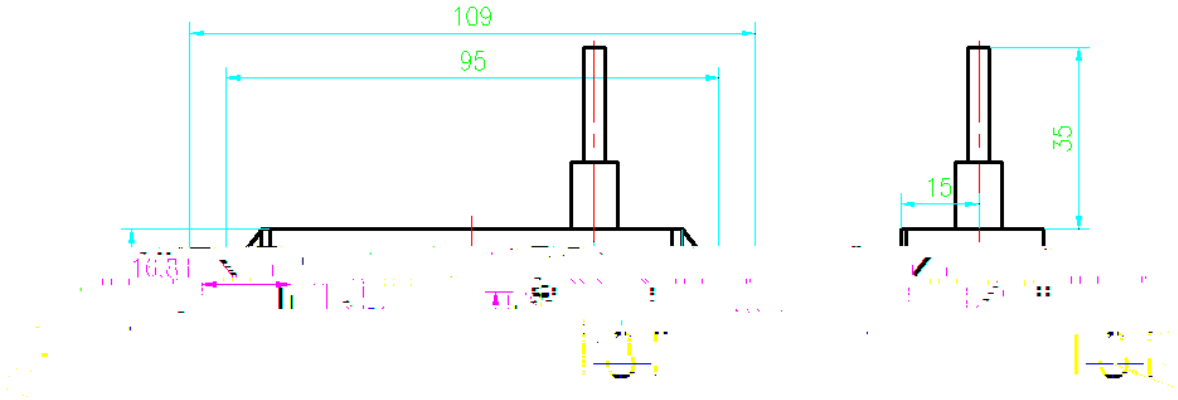
✧

✧

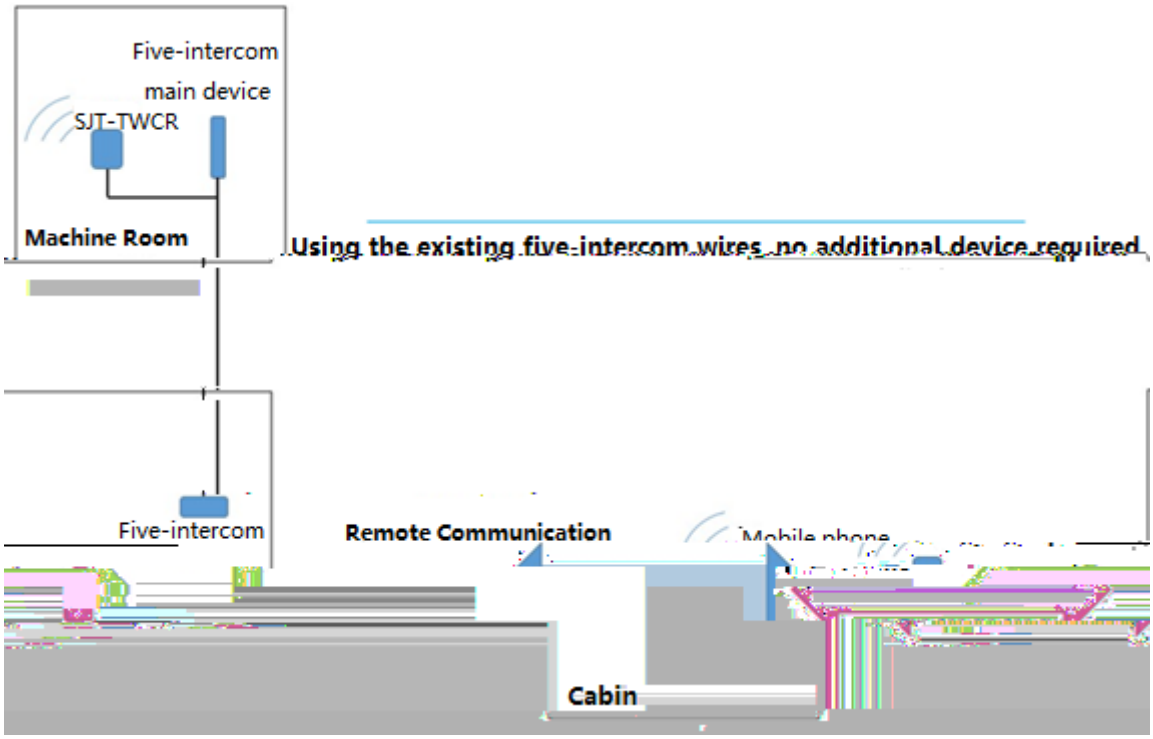
✧

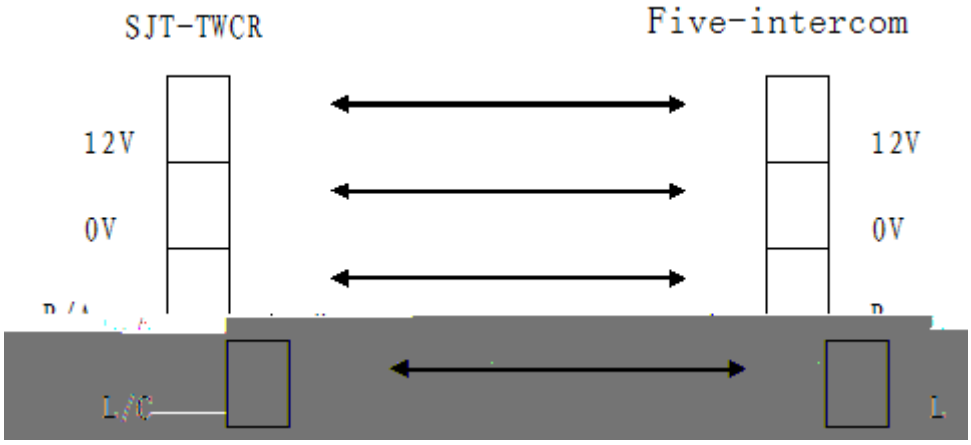
✧

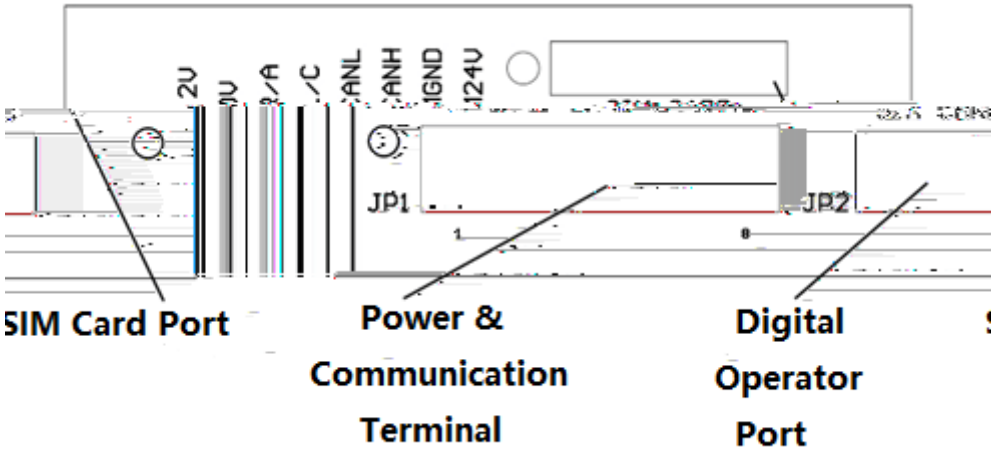
✧

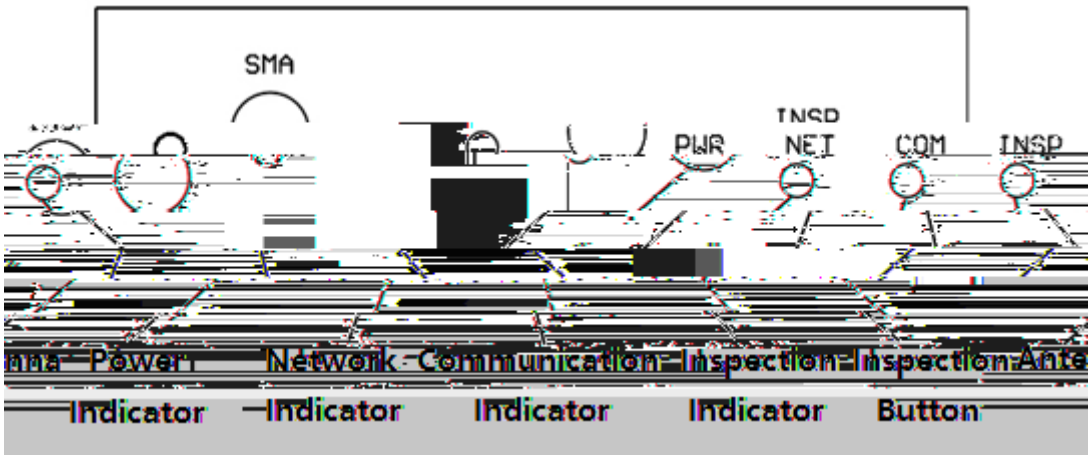

109
95
35
15
16.8




Five-intercom
main device
SJT-TWCR
Machine Room
Using the existing five-intercom wires, no additional device required
Five-intercom
Remote Communication
Cabin


SJT-TWCR
Five-intercom
12V
0V
12V
0V
L
L


JP1
JP2
SIM Card Port
Power &
Communication
Terminal
Digital
Operator
Port


SMA
PWR
NET
COM
INSP
Power
Indicator
Network
Indicator
Communication
Indicator
Inspection
Indicator
Inspection
Button

✧

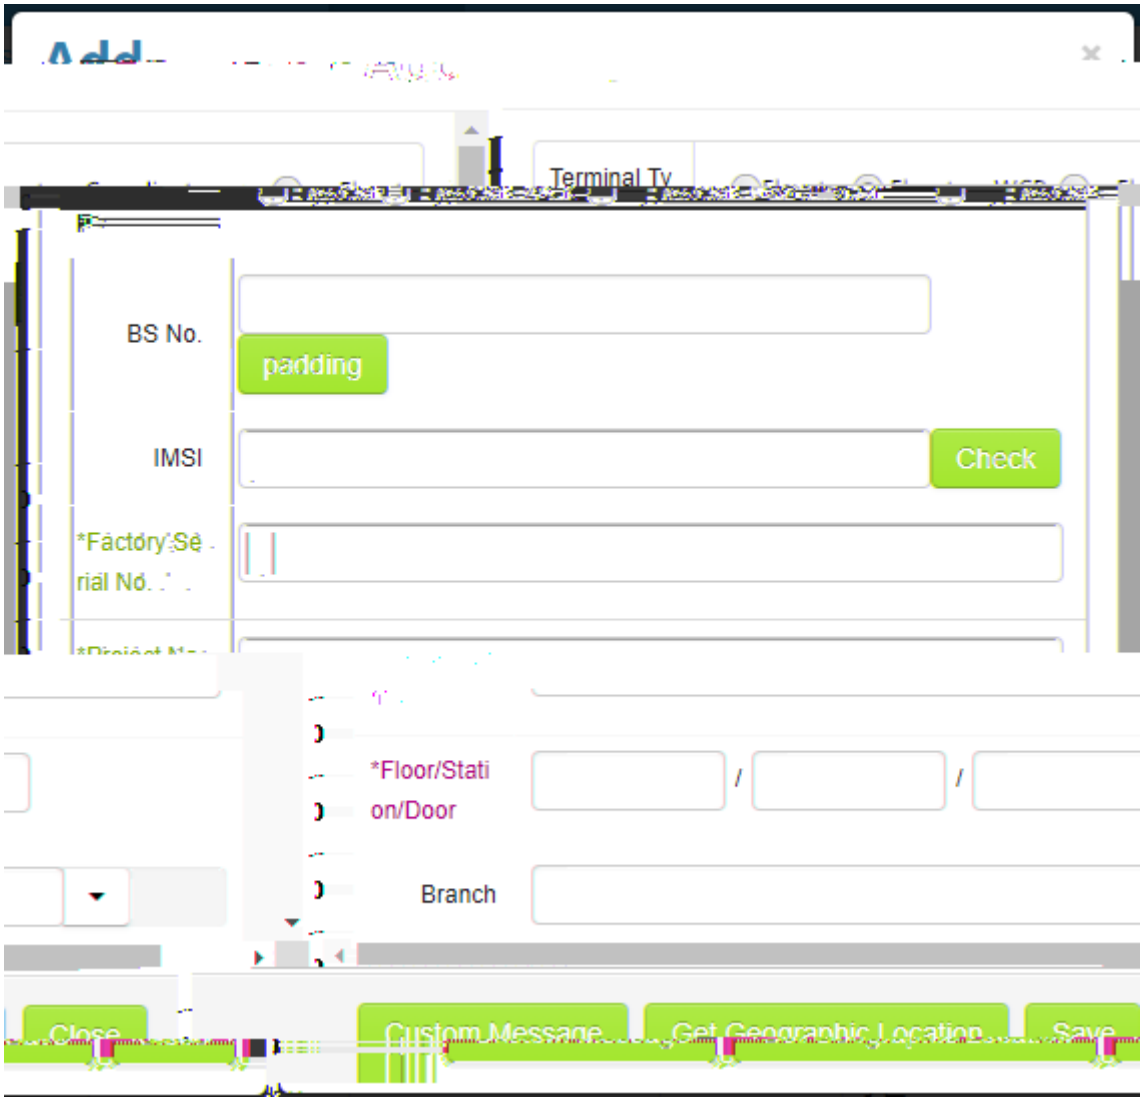
✧

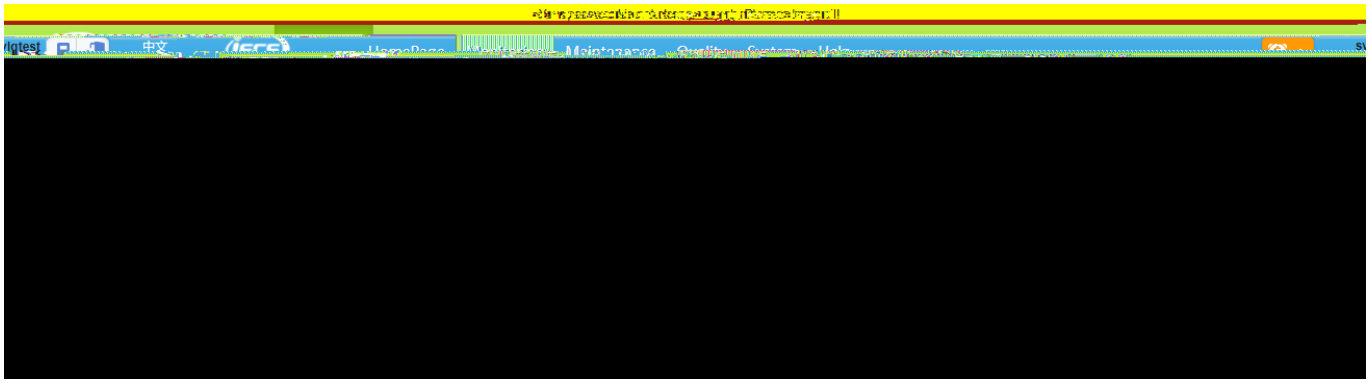
✧

✧

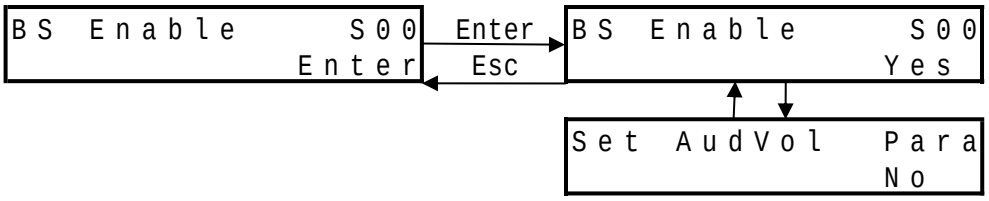
✧


-
-



Terminal Ty
BS No.
padding
IMSI
Check
*Factory Se
rial No.
*Floor/Stati
on/Door
Branch
Close
Custom Message
Get Geographic Location
Save





Factory Serial No.
07_0510
Project Name
GTS_
Address
Elevator Model
Elevator Manufacturer
Person in charge
Start Using Date
Monitoring Start Date
Rated Speed(m/s)
1.00
Rated Load(kg)
800
Total Floor
6
Custom Mess
View
Hall Call Viewing
6
Floor Setting
Wireless Network
Signal Value
Latest Data Time


BS Enable S00
Enter
Enter
Esc
BS Enable S00
Yes
Set AudVol Para
No


Save Para S01
Enter
Enter
Esc
Save Success
Enter


Register S02
Need Registered
or
Register S02
Have Registered


Read Para S03
Enter
Enter
Esc
XXX-XX XXXX
Enter

Wri